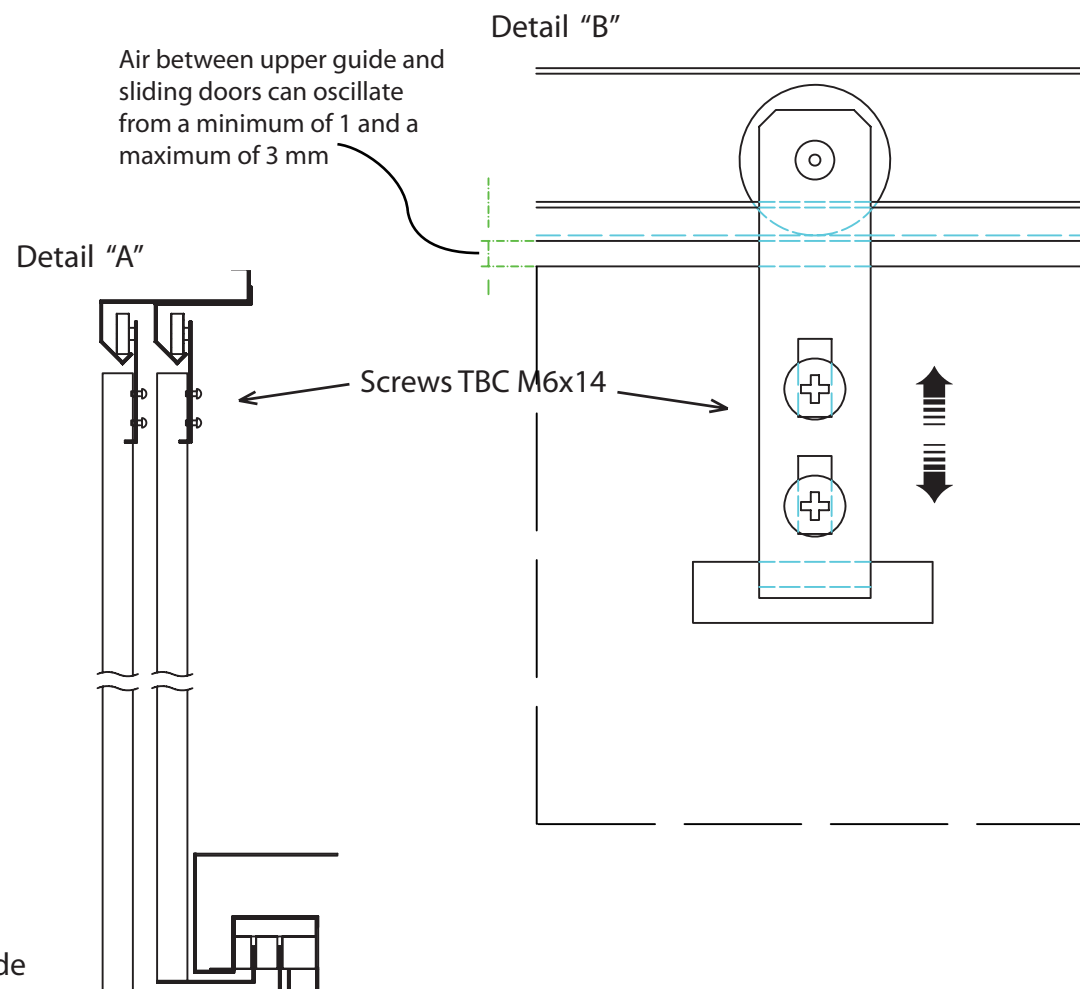


- 1) To adjust sliding doors it's necessary loosen the screws TBC M6x14 that support the same doors (look at details "A" and "B"). Then, proceed with adjustment of the door, raising it or lowering it, so that it is in parallel with the leg (look at detail "C"), or, in case of module structure, in parallel with the side of structure (look at detail "D").

- 2) Once reached the correct position, tighten again the screws TBC M6x14.


**Bendoni **inox****
**BENDONI INOX S.r.l.**

I-52010 Bibbiena (Arezzo) - Fraz. Soci - Via S.Marco, 9

Phone: +39.0575.560.231 - Fax: +39.0575.561.362

 Mail: [info@bendoni.it](mailto:info@bendoni.it)

 Web: [www.bendoni.it](http://www.bendoni.it)

Adjustment of sliding doors - IC41TA2

Issued:

25/09/2018

Update:

0

Sheet 1 of 1