

Date 06/05/2004


File name Lower leg\_EN


Version

A06-1

## Lower leg


- 1) Apply the legs making match holes of lower reinforcement with holes of leg's plate (like showed in the diagram below) and using the supplied screws for fixing. Repeat the operation for all the legs.

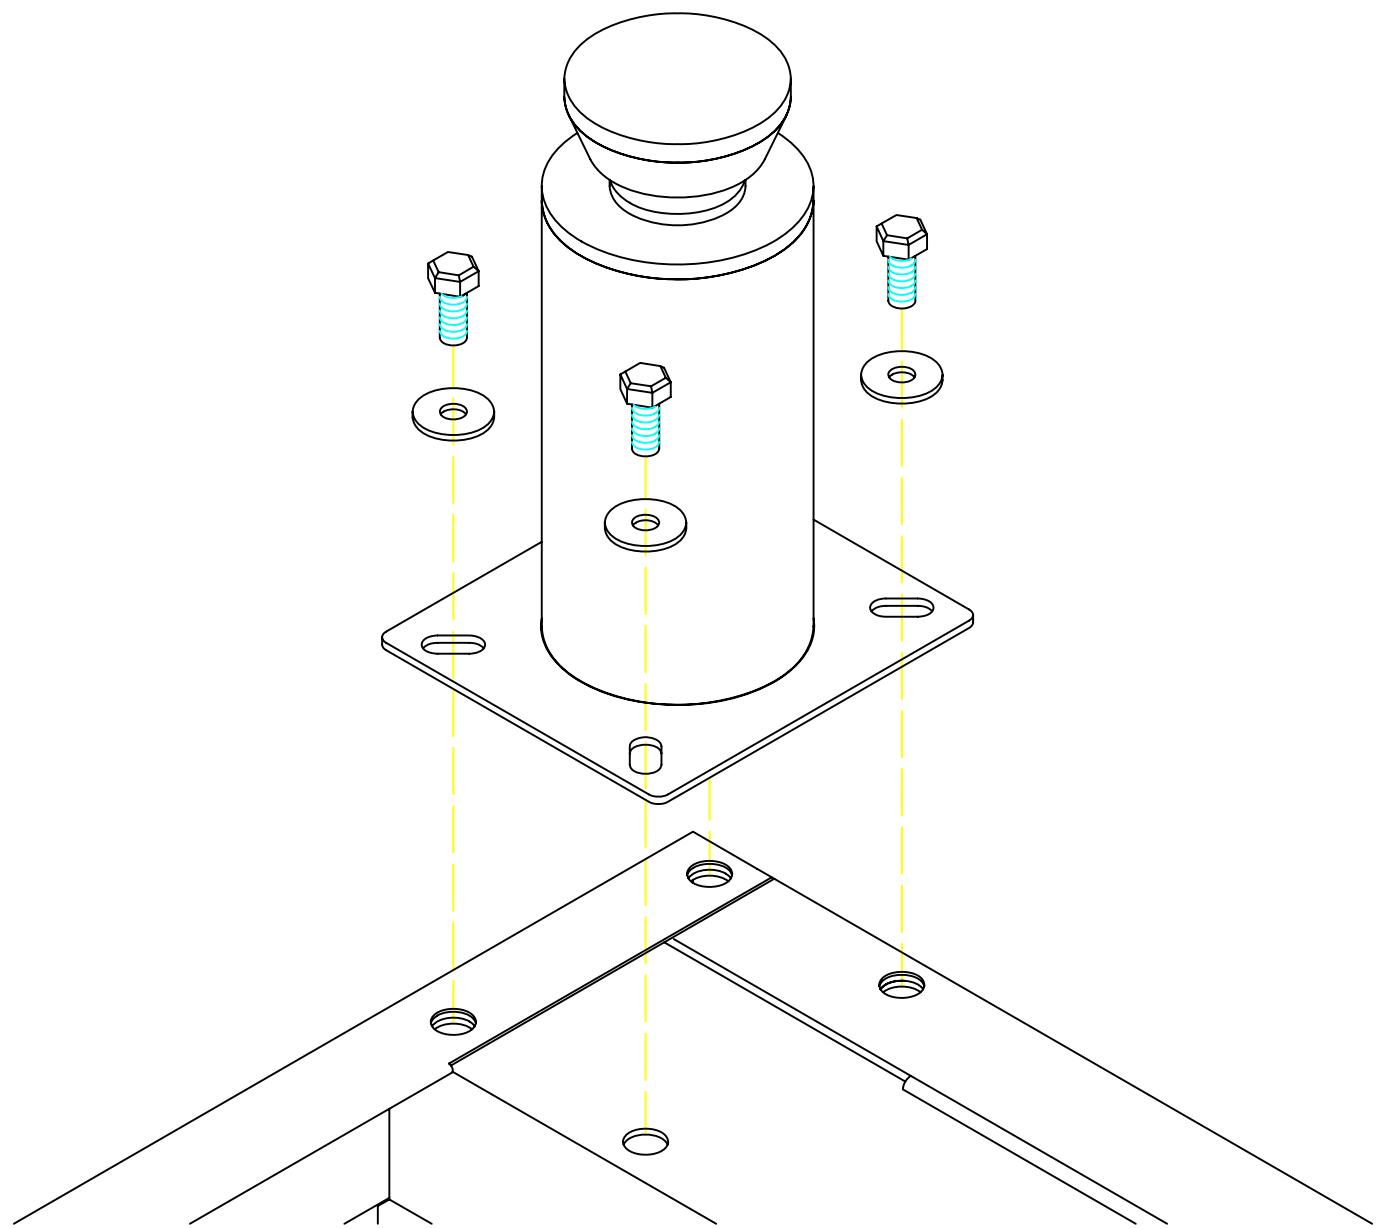

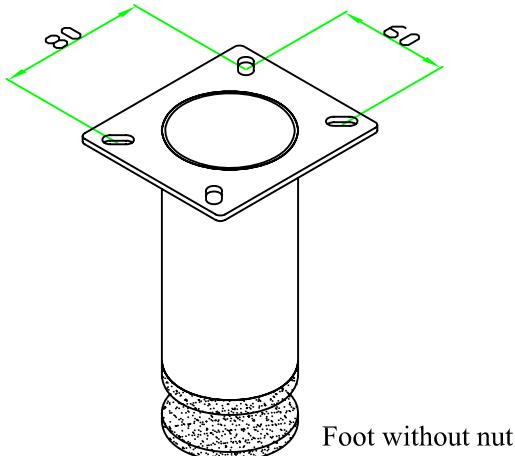


**BendoniInox** Tube Ø60,3 - Normal module type plate (single leg)

Length tube	Use
87 mm	Module H850 Wash basins H850 Multipurpose cupboards AP-AT-AV
127 mm	Pastry table - Wash basins LG series Cupboard with sliding doors (central) Cupboards with shutting doors (single block structure)
137 mm	Normal chest of drawers H900 - Pizza chest of drawers H900 Module H900

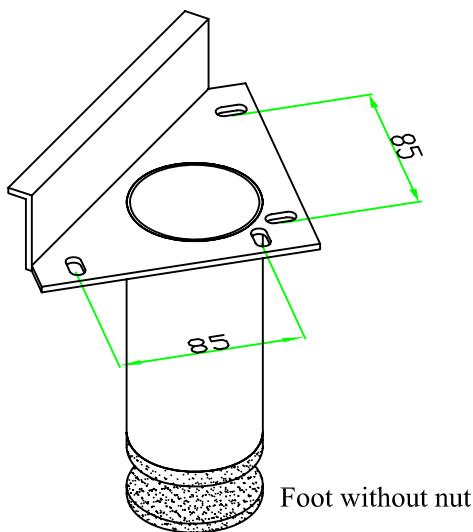


**BendoniInox** Tube Ø60,3 - Changing room lockers type plate (1204)

Length tube	Use
87 mm	/
127 mm	Changing room lockers
137 mm	/

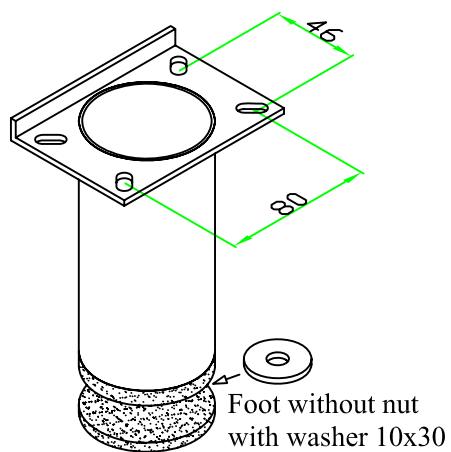

**BendoniInox** Tube Ø60,3 - Cupboard sliding doors lateral type plate (0104)

Length tube	Use
87 mm	/
127 mm	Cupboards with sliding doors (lateral) with washer
137 mm	/

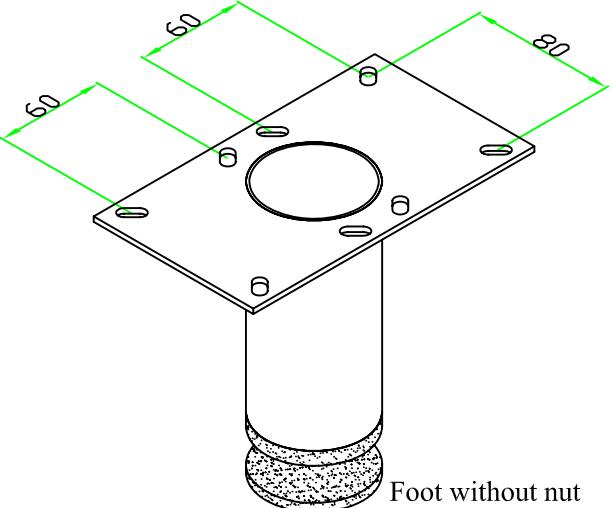

**BendoniInox** Tube Ø60,3 - Double module type plate (double leg)

Length tube	Use
87 mm	Module H850
127 mm	Pastry tables
137 mm	Module H900