



- 1) Posizionare capovolto il piano di lavoro (come disegno), avendo cura di appoggiare il piano sulle strisce di polistirolo presenti nell'imballaggio del tavolo.

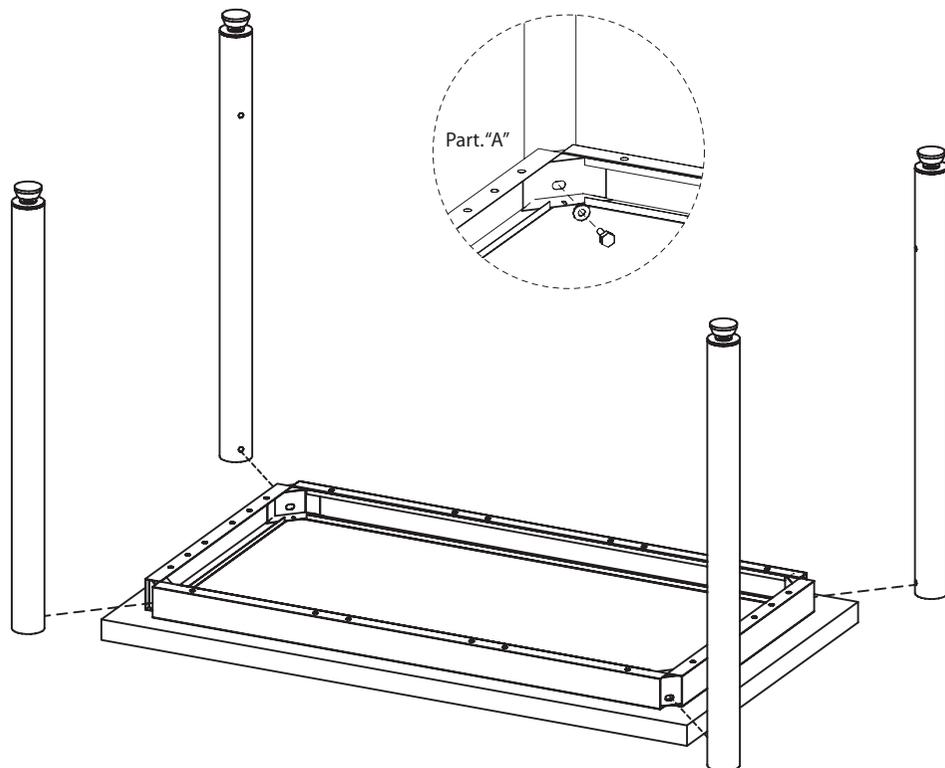

- 2) Applicare le gambe alla fascia superiore del tavolo (fornita già fissata al piano) utilizzando 4 viti TE 10x20 insieme alle rondelle in dotazione senza stringerle.

- 3) Applicare il sottopiano capovolto (come disegno) utilizzando 4 viti TE 10x40 in dotazione senza stringerle.

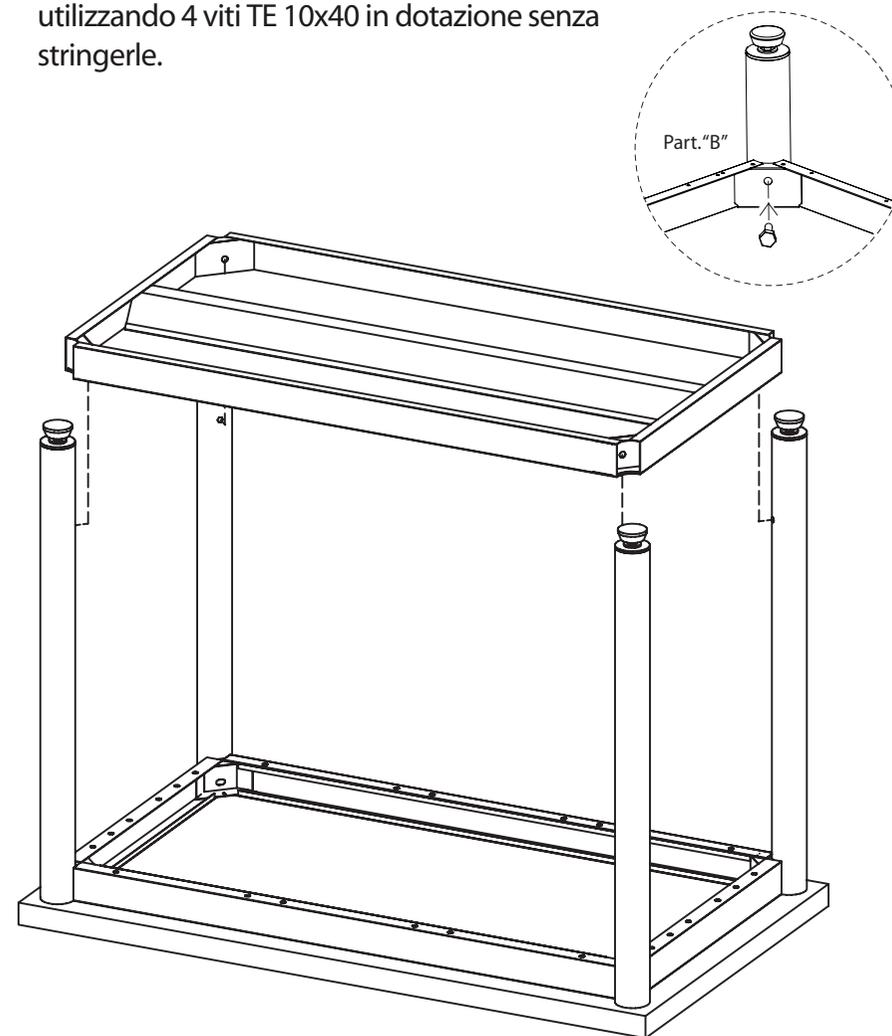

- 4) Mandare a battuta le 8 viti e poi stringerle con moderazione.

Bendoni **inox**

BENDONI INOX S.r.l.

I-52010 Bibbiena (Arezzo) - Fraz. Soci - Via S.Marco, 9

Phone: +39.0575.560.231 - Fax: +39.0575.561.362

Mail: info@bendoni.it Web: www.bendoni.it

Tavolo con sottopiano - IC41TA1

Emissione:


11/12/2013

Revisione:

0


Foglio 1 di 1

1) Place the working Top upside down (as drawing), taking care to lean the Top on styrofoam stripes of the table packaging.

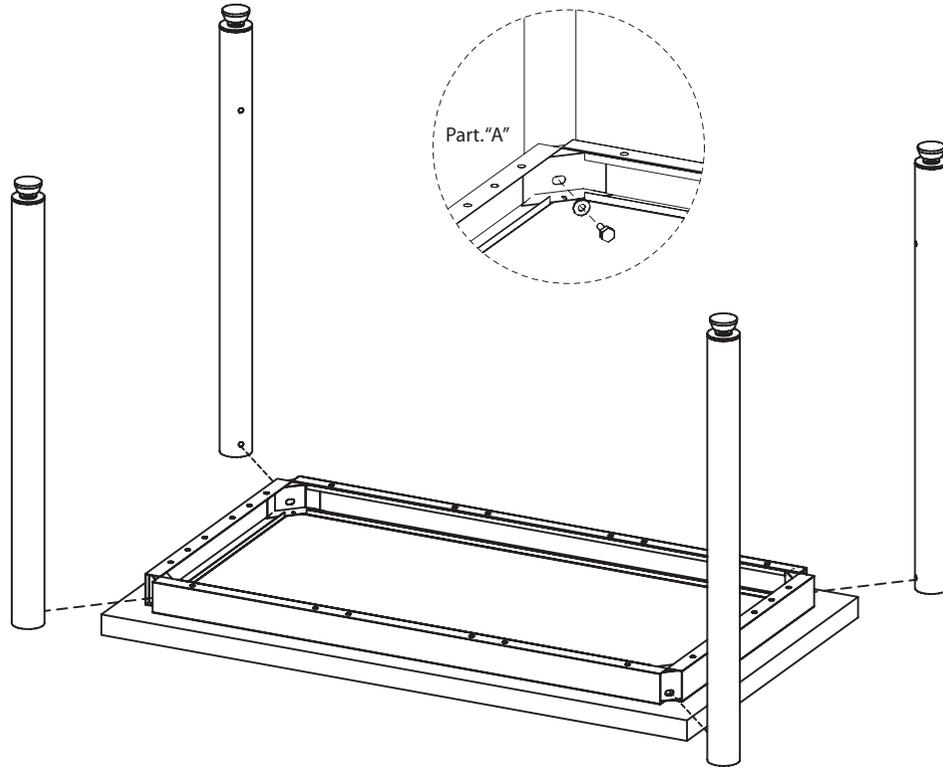

2) Apply the legs at upper band of the table (supplied already fixed on the working Top) using the 4 screws TE 10x20 together with the washers supplied, without tighten them.

3) Apply the lower shelf upside down (as drawing) using the 4 screws TE 10x40 supplied, without tighten them.

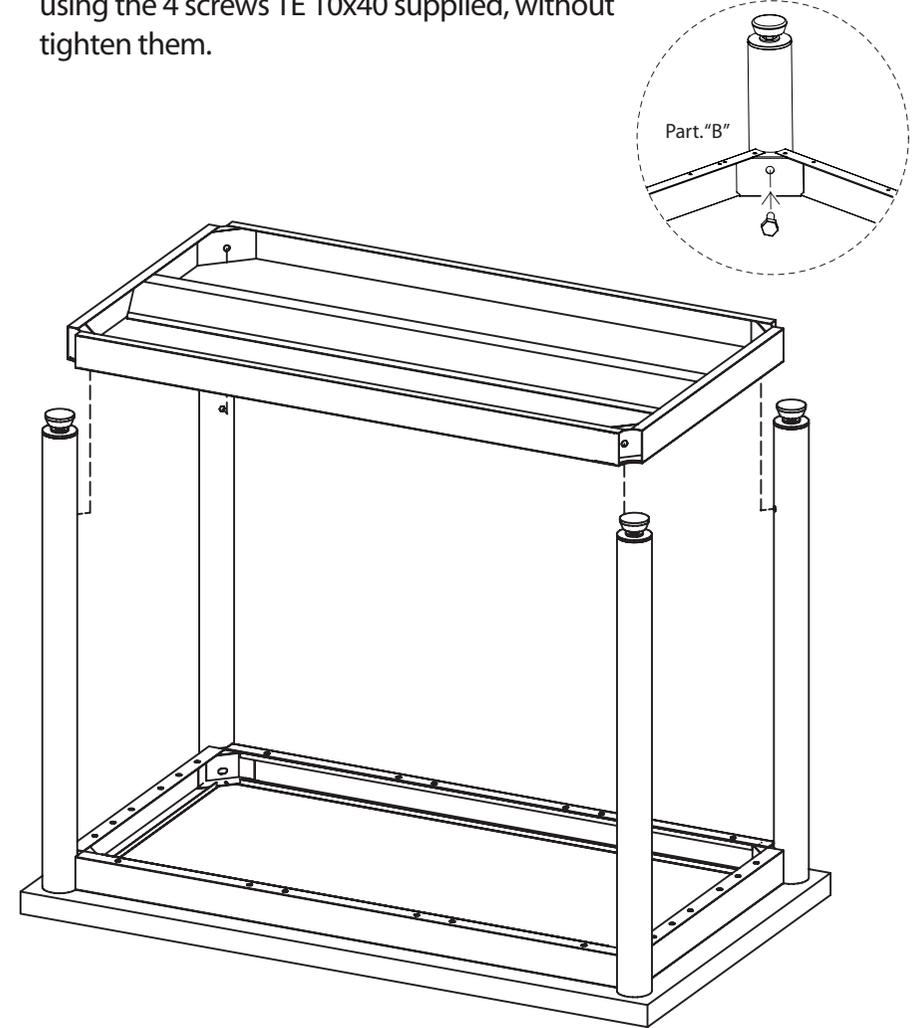

4) Check that all the 8 screws are screwed and tighten them carefully.

Bendoni **inox**

BENDONI INOX S.r.l.

I-52010 Bibbiena (Arezzo) - Fraz. Soci - Via S.Marco, 9

Phone: +39.0575.560.231 - Fax: +39.0575.561.362

Mail: info@bendoni.it Web: www.bendoni.it

Table with lower shelf - IC41TA1

Issued:

11/12/2013

Update:

0

Sheet 1 of 1